 
 
 
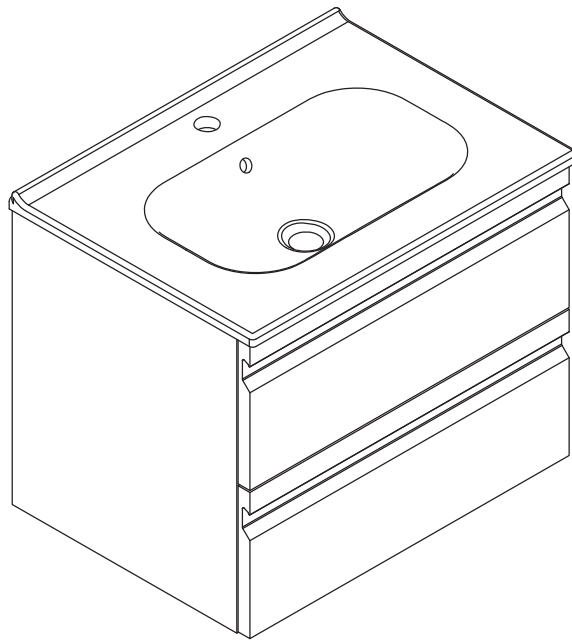 


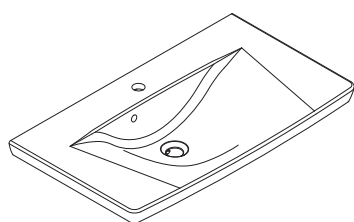


DANSANI®

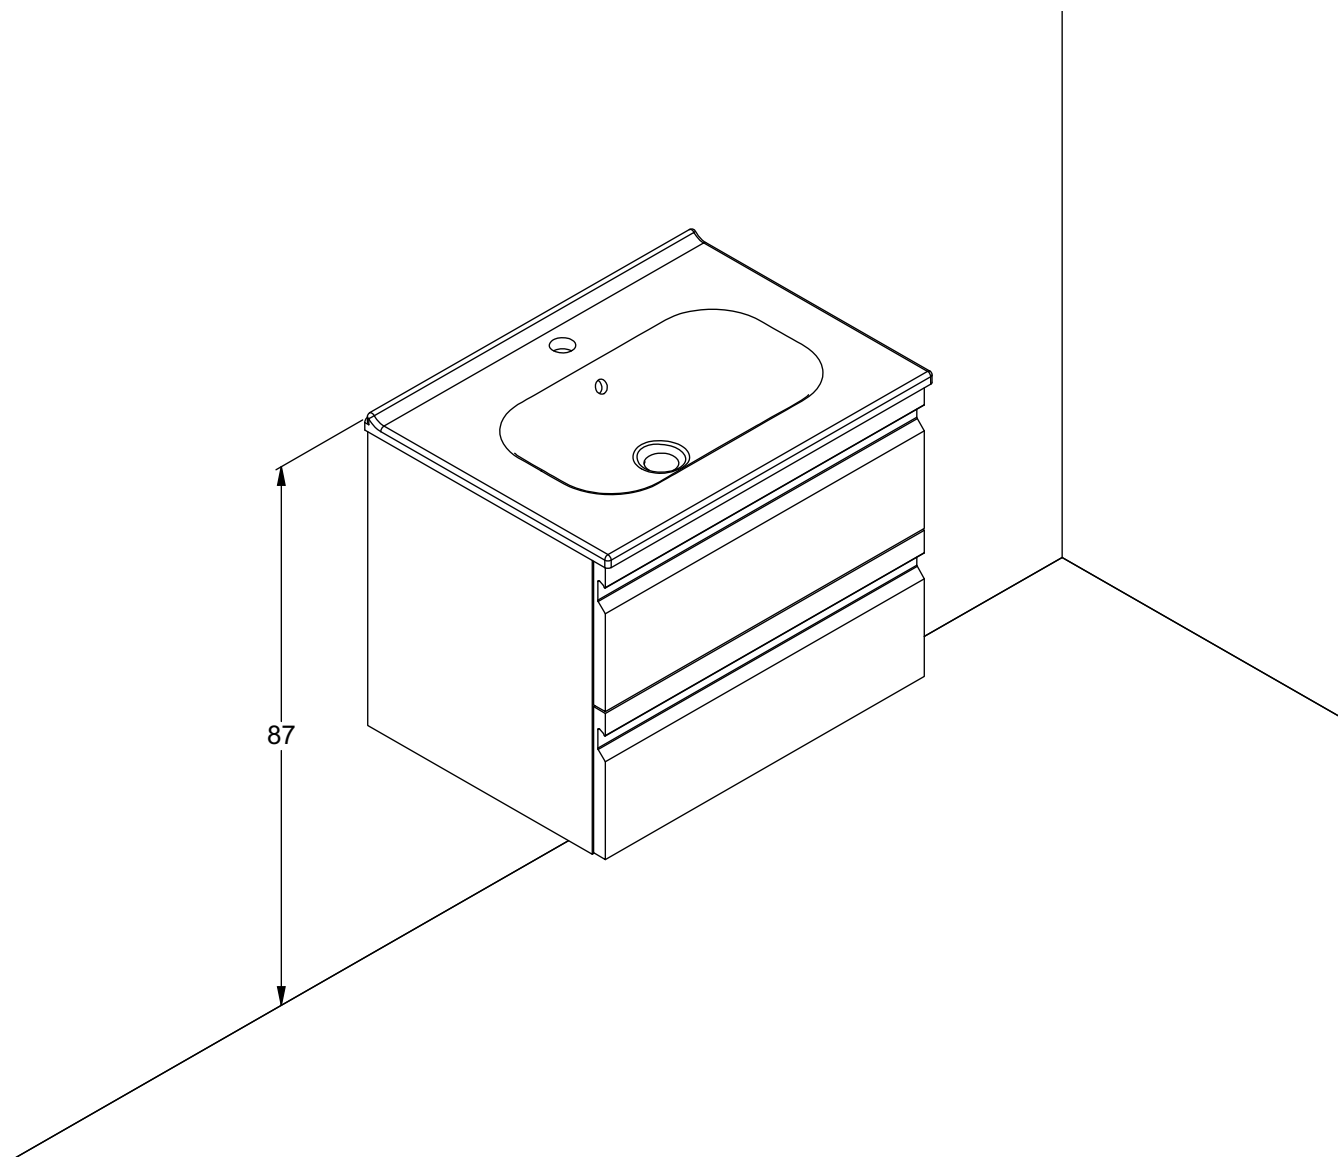


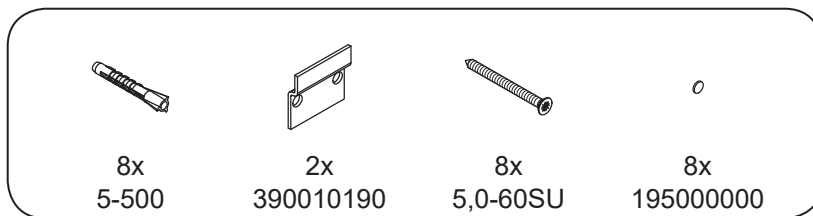

 
Andante
X=78

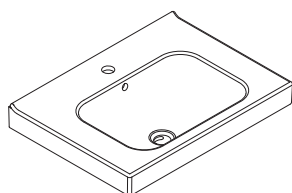


Menuet
X=76

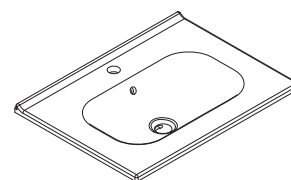 

Kantate
X=81


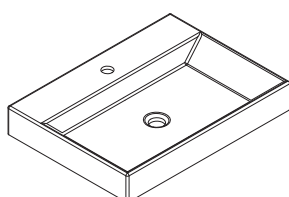 


Canto
X=73,9

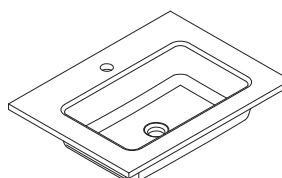 


Fresco
X=81,1

  
1

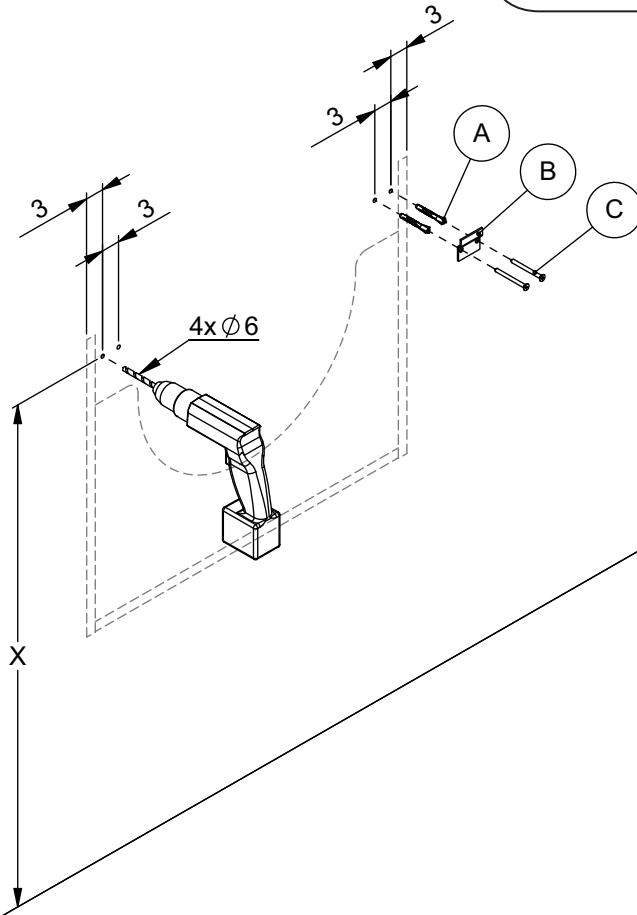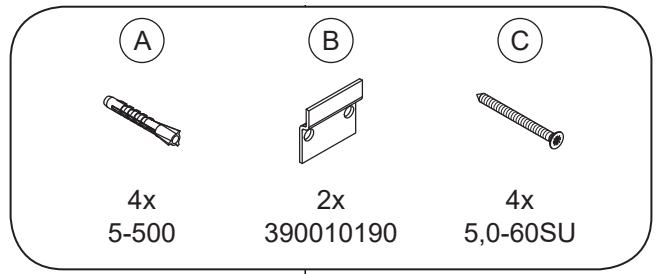


2

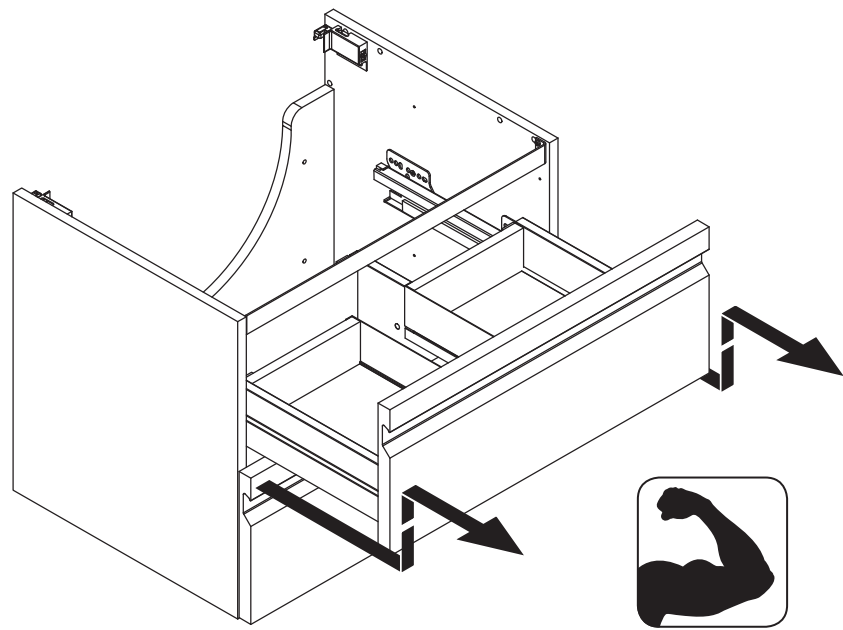 


3

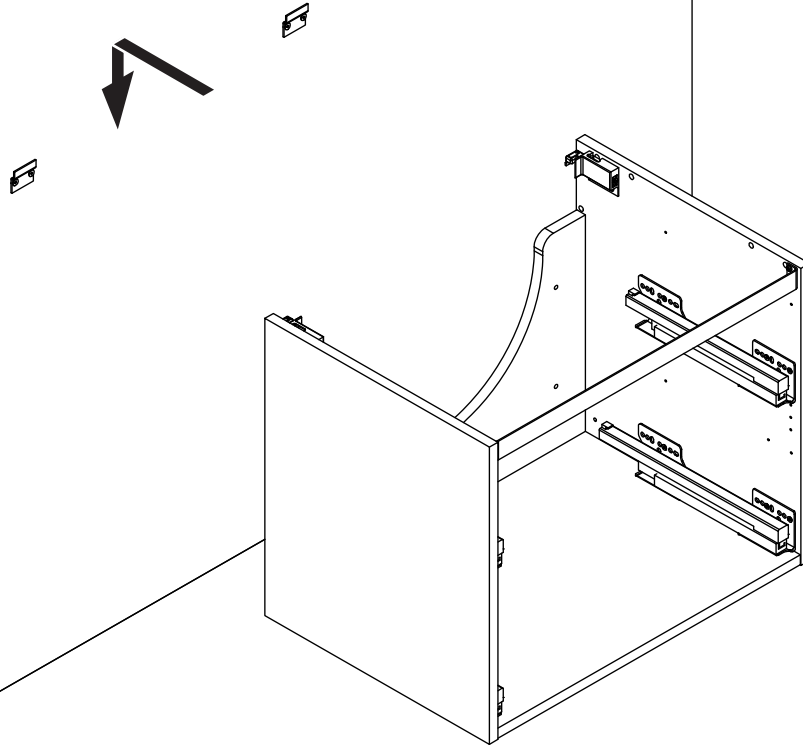 


4

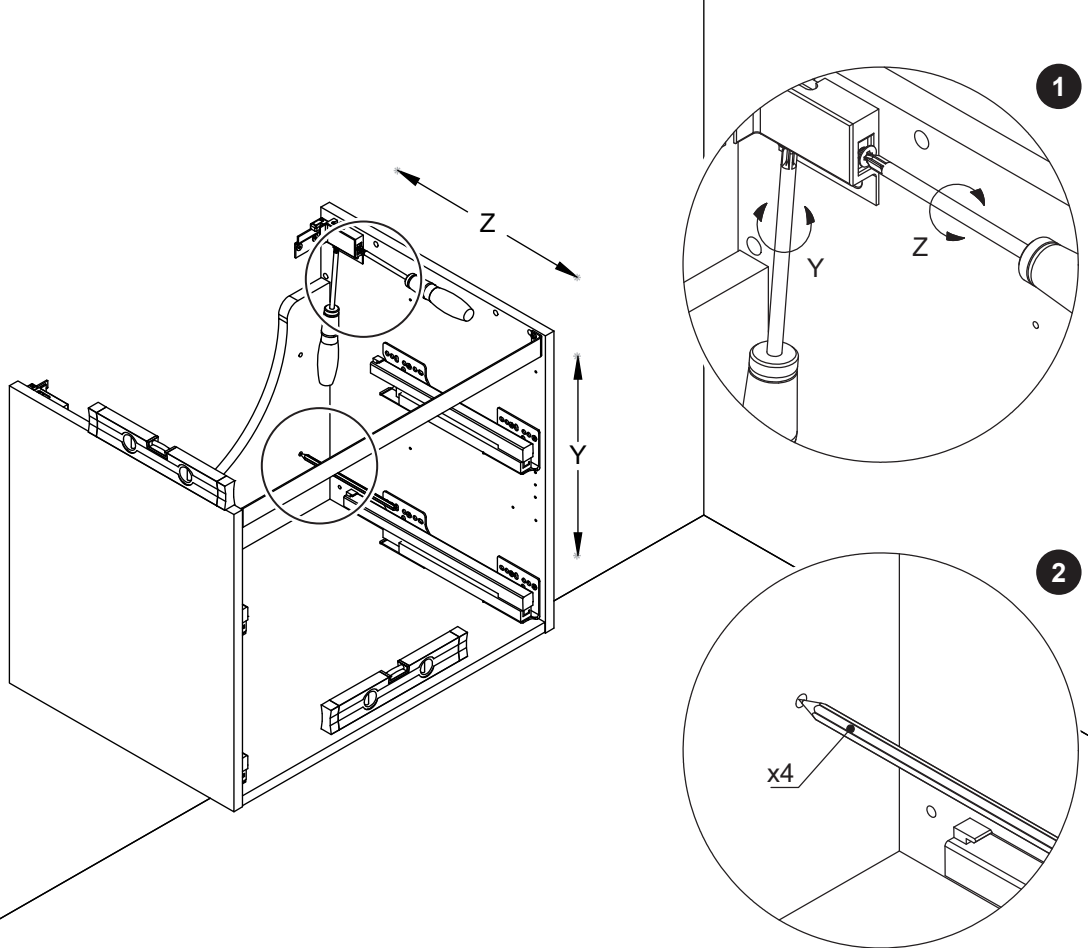 


5

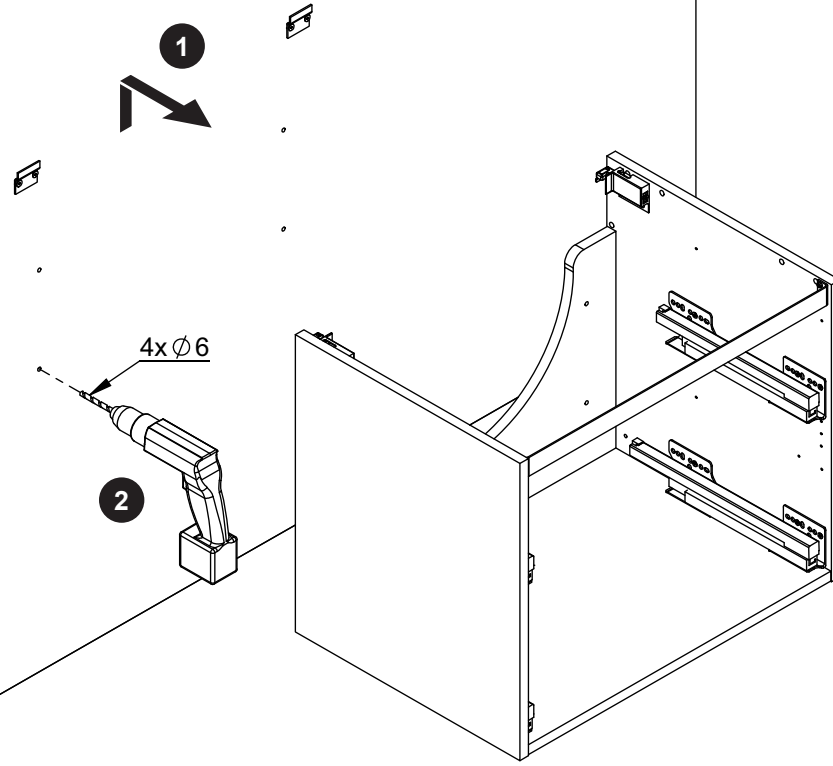 


6

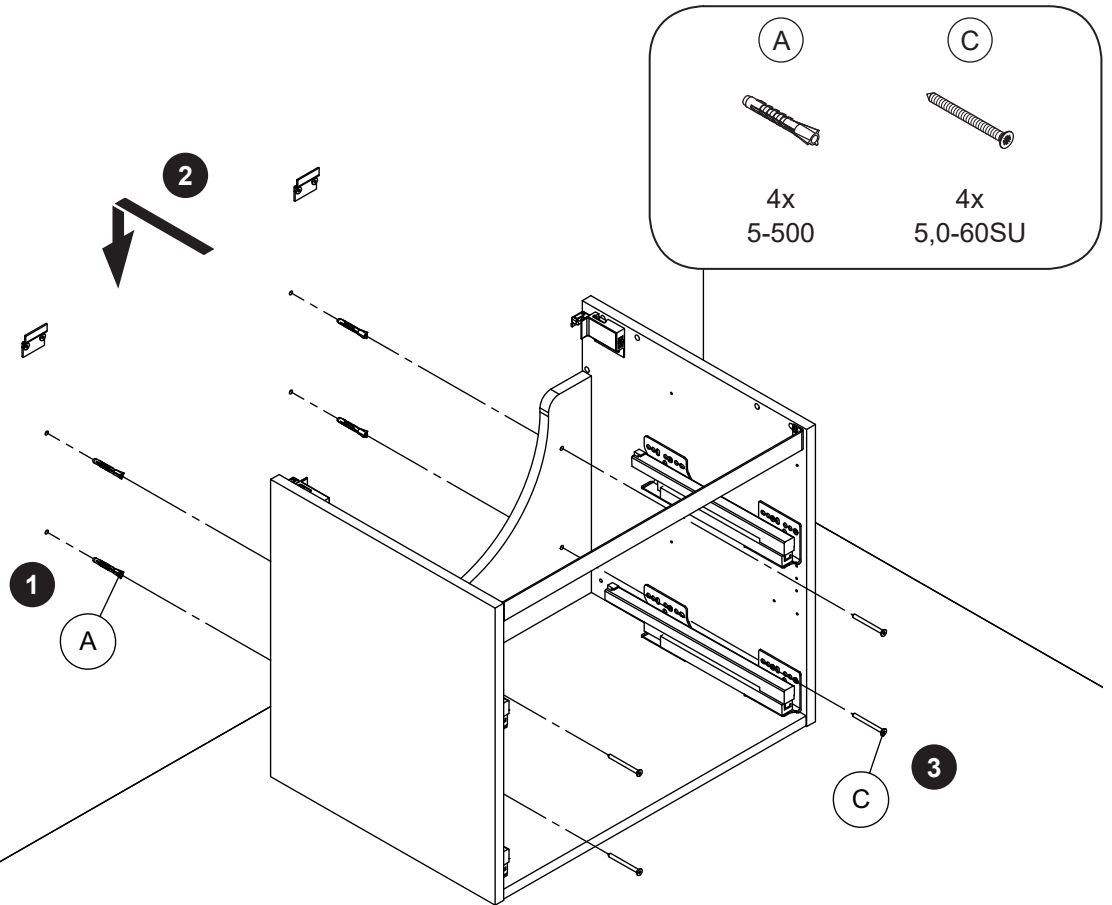 


7

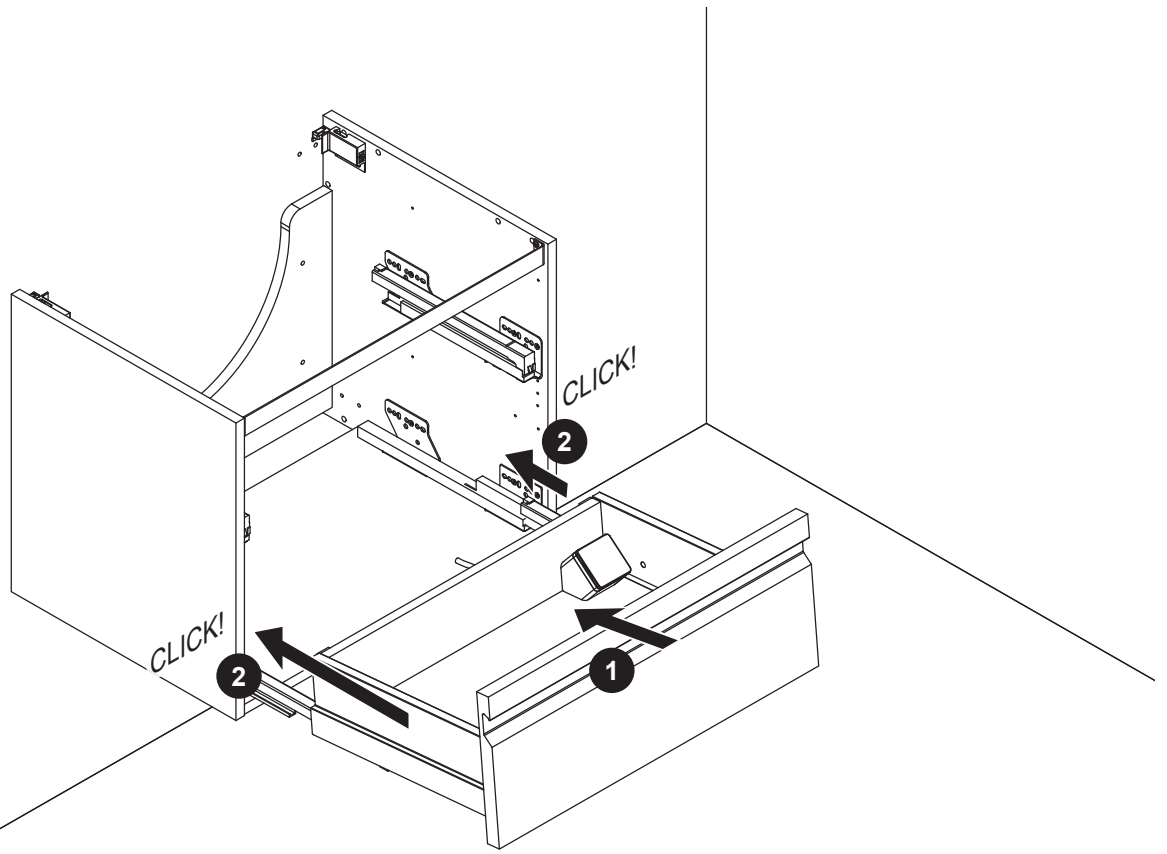 


8A

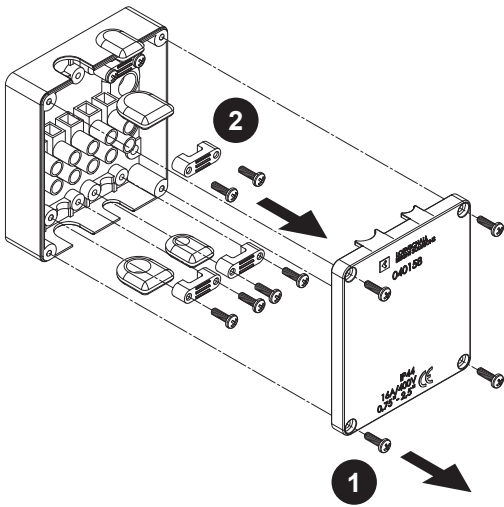 


8B

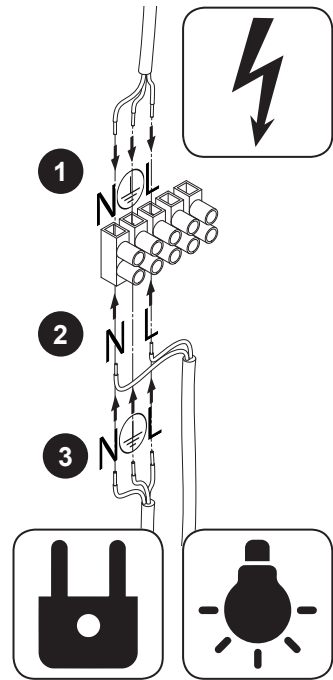 


8C

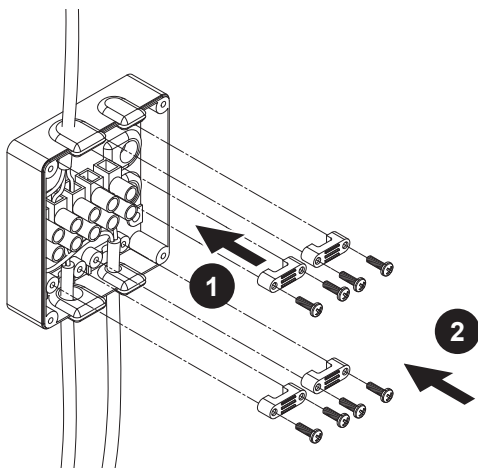 



8D

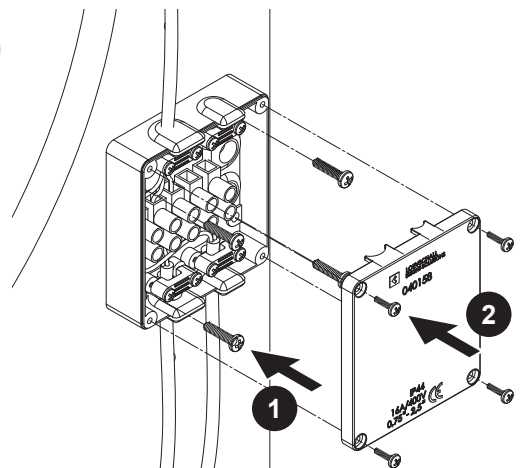 


9

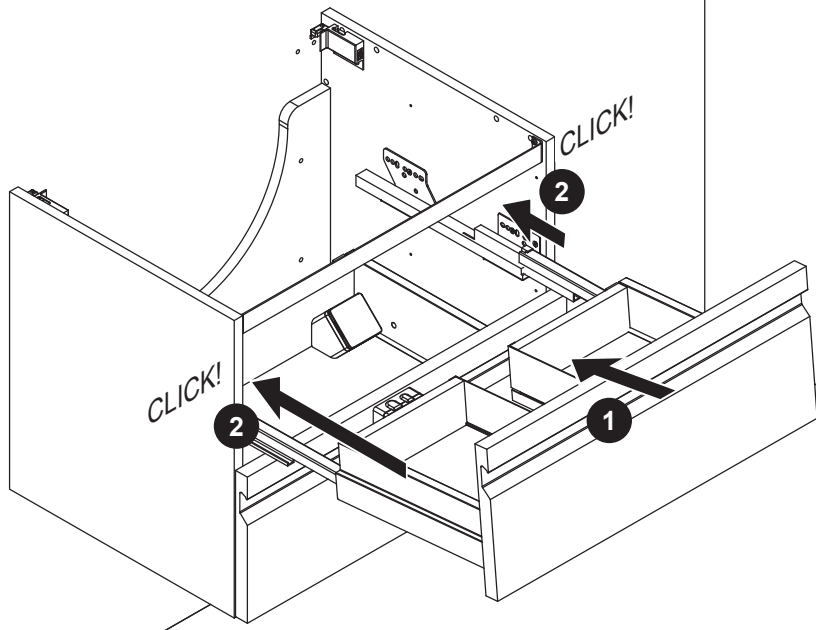 


10

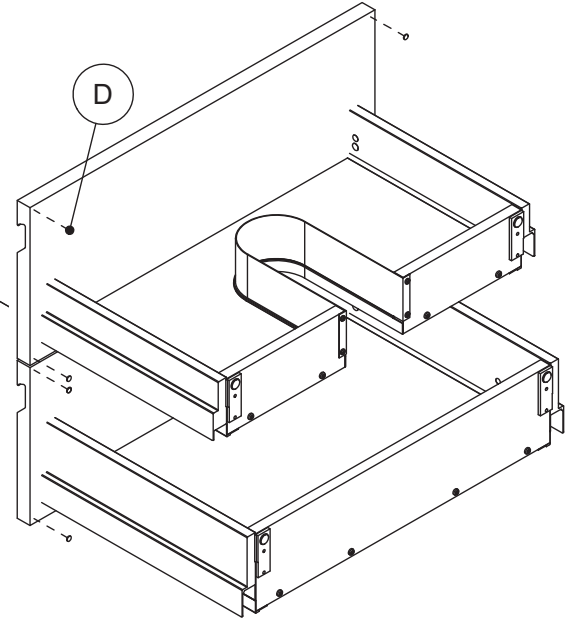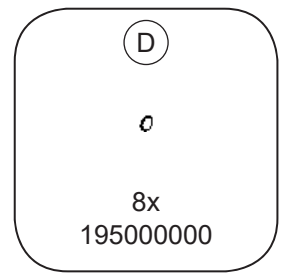  

11

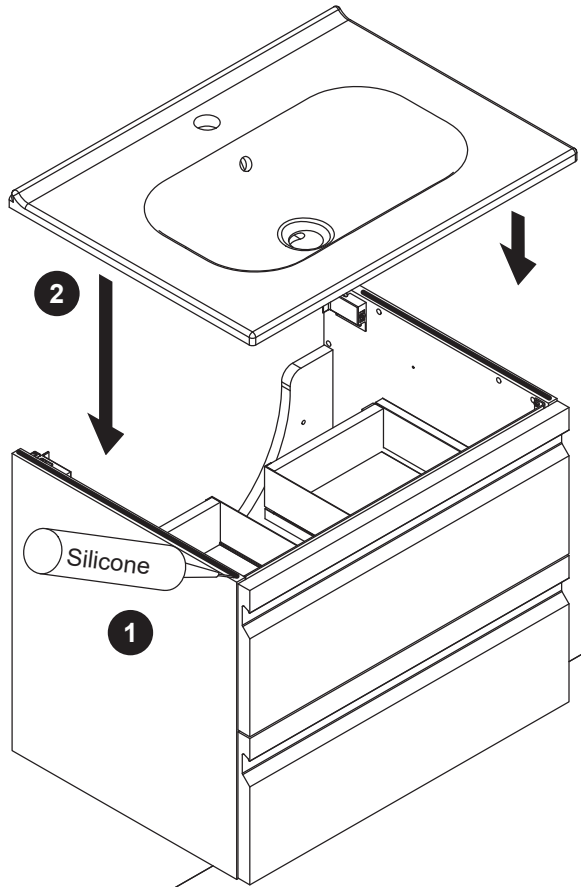 

12

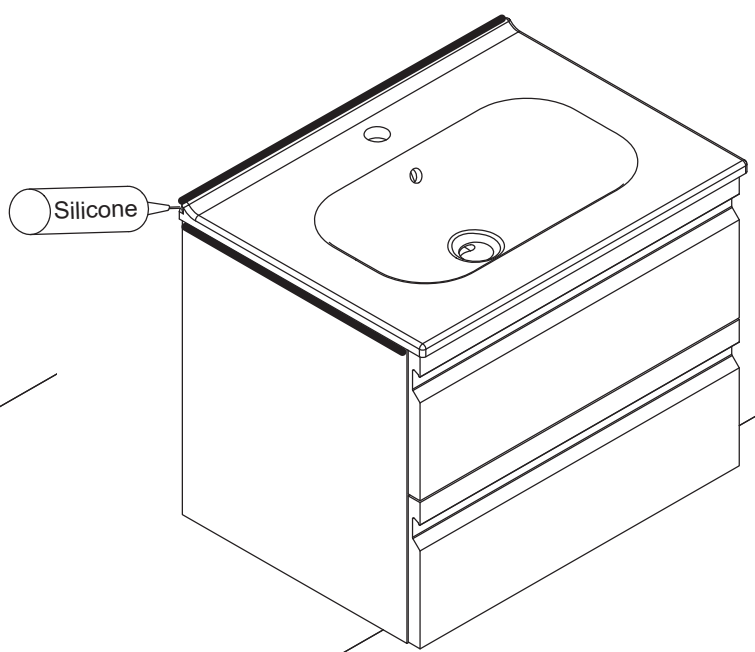 

13

